

Reset Engine Oil Replacement Reminder Light

2005 Model Year Toyotas

Model	Reset Reminder Light Procedure
'05 Avalon Pages 153 & 154	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the engine off with the odometer reading shown.2. Turn the ignition switch is set at ON while holding down the trip meter reset knob. Hold down the knob for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
'05 Camry Page 124	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.2. Turn the ignition switch to "ON" position while holding down the trip meter reset knob. Hold down the knob for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
'05 Corolla Page 114	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the "OFF" position with the odometer reading shown.2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
'05 Echo	No Engine Oil Replacement Reminder
'05 Highlander Page 142	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the "LOCK" position with the odometer reading shown.2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.

Reset Engine Oil Replacement Reminder Light

2005 Model Year Toyotas

Model	Reset Reminder Light Procedure
<p>'05 Land Cruiser</p> <p>Page 127</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "OFF" position with the odometer reading shown. 2. Turn the ignition key to the "ON" position while holding down the "ODO/TRIP" knob. <p>Hold down the knob until the light goes off. Before the light goes off, it illuminates for 3 seconds, flashes for 2 seconds, illuminates for 1 second.</p>
<p>'05 Matrix</p> <p>Page 115</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown. 2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>
<p>'05 Prius</p> <p>Pages 122 & 123</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Press the "POWER" switch to the "OFF" mode with the odometer reading shown. 2. Press the "POWER" switch twice to select the "IG-ON" mode while holding down the trip meter reset button. <p>Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>
<p>'05 RAV4</p> <p>Page 117</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "OFF" position with the odometer reading shown. 2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>

Reset Engine Oil Replacement Reminder Light

2005 Model Year Toyotas

Model	Reset Reminder Light Procedure
'05 Sequoia Page 169	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
'05 Sienna Pages 182 & 183	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
'05 Solara Pages 135 & 136	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
'05 Tacoma Page 152	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the "OFF" position with the odometer reading shown.2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.

Reset Engine Oil Replacement Reminder Light

2005 Model Year Toyotas

Model	Reset Reminder Light Procedure
'05 Tundra Page 179	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none">1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>
'05 4Runner Page 151	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none">1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the knob until the light goes off. Before the light goes off, it illuminates for 3 seconds, flashes for 2 seconds, illuminates for 1 second.</p> <p>If the system fails to reset, the light will continue flashing.</p>