

Reset Engine Oil Replacement Reminder Light 2005 Model Year Scion

Model	Reset Reminder Light Procedure
<p>'05 tC</p> <p>Page 96</p>	<p>The system must be reset after the engine oil replacement. Reset the system by following the procedure below:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "OFF" position with the odometer reading shown. (For details, see "Odometer and two trip meters" on page 91.) 2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the knob for at least 5 seconds. The light goes off, and the display shows zero for 1 second and changes to the odometer reading.</p> <p>If the system fails to reset, the light will remain on or keep flashing.</p>
<p>'05 xA</p> <p>Page 87</p>	<p>The system must be reset after the engine oil replacement. Reset the system by following the procedure below:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "OFF" position with the odometer reading shown. (For details, see "Odometer and two trip meters" on page 81.) 2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the knob for at least 5 seconds. The light goes off, and the display shows zero for 1 second and changes to the odometer reading.</p> <p>If the system fails to reset, the light will remain on or keep flashing.</p>
<p>'05 xB</p> <p>Page 81</p>	<p>The system must be reset after the engine oil replacement. Reset the system by following the procedure below:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "OFF" position with the odometer reading shown. (For details, see "Odometer and two trip meters" on page 75.) 2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the knob for at least 5 seconds. The light goes off, and the display shows zero for 1 second and changes to the odometer reading.</p> <p>If the system fails to reset, the light will remain on or keep flashing.</p>