

Reset Engine Oil Replacement Reminder Light 2006 Model Year Scion

Model	Reset Reminder Light Procedure
<p>'06 tC</p> <p>Page 96</p>	<p>The system must be reset after the engine oil replacement. Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "OFF" position with the odometer reading shown. (For details, see "Odometer and two trip meters" on page 91.) 2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the knob for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p>
<p>'06 xA</p> <p>Page 86</p>	<p>The system must be reset after the engine oil replacement. Reset the system by following the procedure below:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "OFF" position with the odometer reading shown. (For details, see "Odometer and two trip meters" on page 81.) 2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the knob for at least 5 seconds. The light goes off, and the display shows zero for 1 second and changes to the odometer reading.</p> <p>If the system fails to reset, the light will remain on or keep flashing.</p>
<p>'06 xA (08/06-12/06 Prod)</p> <p>Page 92</p>	<p>The system must be reset after the engine oil replacement. Reset the system by following the procedure below:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "OFF" position with the odometer reading shown. (For details, see "Odometer and two trip meters" on page 87.) 2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the knob for at least 5 seconds. The light goes off, and the display shows zero for 1 second and changes to the odometer reading.</p> <p>If the system fails to reset, the light will remain on or keep flashing.</p>
<p>'06 xB</p> <p>Page 88</p>	<p>The system must be reset after the engine oil replacement. Reset the system by following the procedure below:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "OFF" position with the odometer reading shown. (For details, see "Odometer and two trip meters" on page 83.)

Reset Engine Oil Replacement Reminder Light
2006 Model Year Scion

Model	Reset Reminder Light Procedure
	<p>2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob.</p> <p>Hold down the knob for at least 5 seconds. The light goes off, and the display shows zero for 1 second and changes to the odometer reading.</p> <p>If the system fails to reset, the light will remain on or keep flashing.</p>