

Reset Engine Oil Replacement Reminder Light

2007 Model Year Toyotas

Model	Reset Reminder Light Procedure
'07 Avalon Pages 153 & 154	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the engine off with the odometer reading shown.2. Turn the ignition switch is set at ON while holding down the trip meter reset knob. Hold down the knob for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
'07 Camry Page 154	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the engine off with the trip meter A reading shown.2. Set the ignition switch at ON while holding down the trip meter reset knob. Hold down the knob for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
'07 Camry Hybrid Vehicle Page 148	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn off the hybrid system with the trip meter A reading shown.2. The "POWER" switch must be set at the ON while holding down the trip meter reset knob. A message "OIL MILEAGE RESET MODE" will appear on the display.3. Hold down the knob at least 5 seconds. A message "COMPLETE" will appear and the message "OIL MILEAGE RESET MODE" goes off.
'07 Corolla Page 110	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
'07 FJ Cruiser Page 108	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob.

Reset Engine Oil Replacement Reminder Light

2007 Model Year Toyotas

Model	Reset Reminder Light Procedure
	<p>Hold down the button for at least 5 seconds. The indicator light flashes and the bars displayed in the odometer disappear gradually. The odometer indicates “000000” and the light goes off.</p> <p>If the system fails to reset, the light will remain flashing.</p>
<p>'07 Highlander</p> <p>Pages 140 & 141</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the “LOCK” position with the odometer reading shown. 2. Turn the ignition key to the “ON” position while holding down the trip meter reset knob. <p>Hold down the button for at least 5 seconds. The odometer indicates “000000” and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>
<p>'07 Highlander Hybrid Vehicle</p> <p>Page 159</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the “LOCK” position with the odometer reading shown. 2. Turn the ignition key to the “ON” position while holding down the trip meter reset knob. A message “MAINT REQD RESET MODE” will appear on the display. 3. Hold down the knob at least 5 seconds. A message “COMPLETE” will appear and a beep will sound.
<p>'07 Land Cruiser</p> <p>Pages 135 & 136</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the “LOCK” position with the odometer reading shown. 2. Turn the ignition key to the “ON” position while holding down the “ODO/TRIP” knob. <p>Hold down the knob until the light goes off. Before the light goes off, it illuminates for 3 seconds, flashes for 2 seconds, illuminates for 1 second.</p>
<p>'07 Matrix</p> <p>Page 113</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the “ACC” or “LOCK” position with the odometer reading shown. 2. Turn the ignition key to the “ON” position while holding down the trip meter reset knob. <p>Hold down the button for at least 5 seconds. The odometer indicates “000000” and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>

Reset Engine Oil Replacement Reminder Light

2007 Model Year Toyotas

Model	Reset Reminder Light Procedure
<p>'07 Prius through Dec. '06 Prod.</p> <p>Pages 130 & 131</p> <p>from Jan. '07 Prod.</p> <p>Page 131</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Press the "POWER" switch to the "OFF" mode with the odometer reading shown. 2. Press the "POWER" switch twice to select the "IG-ON" mode while holding down the trip meter reset button. <p>Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>
<p>'07 RAV4</p> <p>Page 136</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "OFF" position with the trip meter A reading shown. 2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>
<p>'07 Sequoia</p> <p>Page 171</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown. 2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>
<p>'07 Sienna</p> <p>Pages 199 & 200</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown. 2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>

Reset Engine Oil Replacement Reminder Light

2007 Model Year Toyotas

Model	Reset Reminder Light Procedure
'07 Solara Pages 140 & 141	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the “ACC” or “LOCK” position with the trip meter A reading shown.2. Turn the ignition key to the “ON” position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The odometer indicates “000000” and the light goes off. If the system fails to reset, the light will continue flashing.
'07 Tacoma Page 162	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the “OFF” position with the odometer reading shown.2. Turn the ignition key to the “ON” position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The odometer indicates “000000” and the light goes off. If the system fails to reset, the light will continue flashing.
'07 Tundra Pages 202 & 203	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the “OFF” position with the trip meter A reading shown.2. Turn the ignition key to the “ON” position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The odometer indicates “000000” and the light goes off. If the system fails to reset, the light will continue flashing.
'07 Yaris Hatchback Page 121	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the “OFF” position with the trip A reading shown.2. Turn the ignition key to the “ON” position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The indicator light flashes and the bars displayed in the odometer disappear gradually. The odometer indicates “000000” and the light goes off. If the system fails to reset, the light will continue flashing.

Reset Engine Oil Replacement Reminder Light

2007 Model Year Toyotas

Model	Reset Reminder Light Procedure
'07 Yaris Sedan Page 112	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the "OFF" position with the trip A reading shown.2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The indicator light flashes and the bars displayed in the odometer disappear gradually. The odometer indicates "000000" and the light goes off. If the system fails to reset, the light will continue flashing.
'07 4Runner Page 153	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown.2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. Hold down the knob until the light goes off. Before the light goes off, it illuminates for 3 seconds, flashes for 2 seconds, illuminates for 1 second. If the system fails to reset, the light will continue flashing.