

Reset Engine Oil Replacement Reminder Light

2008 Model Year Toyotas

Model	Reset Reminder Light Procedure
<p>'08 Avalon</p> <p>Page 311</p>	<p>After changing the engine oil (U.S.A. only)</p> <p>The oil change system should be reset. Perform the following procedures:</p> <ol style="list-style-type: none"> 1. Switch the display to the odometer. (Page 136) 2. Turn the “ENGINE START STOP” switch to the OFF. 3. While pressing the trip meter reset button, turn the “ENGINE START STOP” switch to the ON. Continue to press and hold the button until the trip meter displays 000000.
<p>'08 Camry</p> <p>Page 323</p>	<p>Changing the engine oil (U.S.A. only)</p> <p>To reset the oil change system, follow the procedure below:</p> <ol style="list-style-type: none"> 1. Turn the “ENGINE START STOP” switch or engine switch to the OFF. 2. While pressing the trip meter reset button (page 141), turn the “ENGINE START STOP” switch or engine switch ON. <ul style="list-style-type: none"> ▶ Without multi-information display 3. Continue to press and hold the knob until the trip meter displays 000000. <ul style="list-style-type: none"> ▶ With multi-information display 3. Continue to press and hold the knob until “COMPLETE” appears on the multi-information display.
<p>'08 Camry Hybrid Vehicle</p> <p>Page 295</p>	<p>Changing the engine oil (U.S.A. only)</p> <p>To reset the oil change system, follow the procedure below:</p> <ol style="list-style-type: none"> 1. Turn off the hybrid system with the trip meter A reading shown. 2. The “POWER” switch must be set in ON mode while holding down the trip meter reset knob. A message “OIL MILEAGE RESET MODE” will appear on the display. 3. Hold down the knob at least 5 seconds. A message “COMPLETE” will appear and the message “OIL MILEAGE RESET MODE” goes off.
<p>'08 Corolla</p> <p>Page 110</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the “ACC” or “LOCK” position with the odometer reading shown. 2. Turn the ignition key to the “ON” position while holding down the trip meter reset knob. <p>Hold down the button for at least 5 seconds. The odometer indicates “000000” and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>

Reset Engine Oil Replacement Reminder Light

2008 Model Year Toyotas

Model	Reset Reminder Light Procedure
<p>'08 FJ Cruiser</p> <p>Page 278</p>	<p>After changing the engine oil (U.S.A. only)</p> <p>The oil change system should be reset. Perform the following procedures:</p> <ol style="list-style-type: none"> 1. Turn the engine switch off with the odometer reading shown (page 124) 2. Turn the engine switch to the ON position while holding down the trip meter reset button. 3. Continue to press and hold the button until the odometer displays 000000. <p>If the system fails to reset, the light will remain flashing.</p>
<p>'08 Highlander</p> <p>Page 424</p>	<p>Changing the engine oil (U.S.A. only)</p> <p>To reset the oil change system, follow the procedure below:</p> <ol style="list-style-type: none"> 1. Set the “ENGINE START STOP” switch or the engine switch OFF. 2. While pressing the trip meter reset button (page 177), set the “ENGINE START STOP” switch or the engine switch ON. <ul style="list-style-type: none"> ▶ Without multi-information display 3. Continue to press and hold the knob until the trip meter displays 000000. <ul style="list-style-type: none"> ▶ With multi-information display 3. Continue to press and hold the knob until “COMPLETE” appears on the multi-information display.
<p>'08 Highlander Hybrid Vehicle</p> <p>Page 429</p>	<p>Changing the engine oil (U.S.A. only)</p> <p>To reset the oil change system, follow the procedure below:</p> <ol style="list-style-type: none"> 1. Set the “POWER” switch OFF. 2. While pressing the trip meter reset button (Page 184), set the “POWER” switch ON mode. 3. Continue to press and hold the button until “COMPLETE” appears on the multi-information display.
<p>'08 Landcruiser</p> <p>Page 380</p>	<p>Resetting the engine oil maintenance data</p> <p>The oil change system should be reset. Perform the following procedures:</p> <ol style="list-style-type: none"> 1. Switch the display to the trip meter A when the engine is running. (Page 161) 2. Turn the “ENGINE START STOP” switch OFF. 3. While pressing the trip meter reset button, set the “ENGINE START STOP” switch to IGNITION ON mode (but do not start the engine because otherwise the reset mode will be cancelled). Continue to press and hold the button until the multi-information display indicates that the reset is complete.

Reset Engine Oil Replacement Reminder Light

2008 Model Year Toyotas

Model	Reset Reminder Light Procedure
<p>'08 Matrix</p> <p>Page 113</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "ACC" or "LOCK" position with the odometer reading shown. 2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>
<p>'08 Prius</p> <p>Page 369</p>	<p>Resetting the engine oil maintenance data (U.S.A. only)</p> <p>Perform the following steps:</p> <ol style="list-style-type: none"> 1. Turn the "POWER" switch to "OFF" mode. 2. Turn the "POWER" switch to ON mode with the trip meter reset button held down. 3. Keep pressing the button for longer than 5 seconds after the "POWER" switch is in ON mode. <p>When the odometer indicates "000000" and the light goes off, the system reset is completed.</p> <p>If the system fails to reset, the light will continue flashing.</p>
<p>'08 RAV4</p> <p>Page 138</p>	<p>Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the ignition key to the "OFF" position with the trip meter A reading shown. 2. Turn the ignition key to the "ON" position while holding down the trip meter reset knob. <p>Hold down the button for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p> <p>If the system fails to reset, the light will continue flashing.</p>
<p>'08 Sequoia</p> <p>Page 443</p>	<p>Changing the engine oil (U.S.A. only)</p> <p>To reset the oil change system, follow the procedure below:</p> <ol style="list-style-type: none"> 1. Turn the engine switch off with trip meter A reading shown. 2. While pressing the trip meter reset button (page 157), turn the engine switch on. <ul style="list-style-type: none"> ▶ Without multi-information display 3. Continue to press and hold the button until the trip meter displays 000000. <ul style="list-style-type: none"> ▶ With multi-information display 3. Continue to press and hold the button until "MAINT REQD RESET MODE COMPLETE" appears on the multi-information display.

Reset Engine Oil Replacement Reminder Light

2008 Model Year Toyotas

Model	Reset Reminder Light Procedure
'08 Sienna Pages 199 & 200	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the engine switch to the “ACC” or “LOCK” position with the odometer reading shown.2. Turn the engine switch to the “ON” position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The odometer indicates “000000” and the light goes off. If the system fails to reset, the light will continue flashing.
'08 Solara Pages 140 & 141	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the “ACC” or “LOCK” position with the trip meter A reading shown.2. Turn the ignition key to the “ON” position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The odometer indicates “000000” and the light goes off. If the system fails to reset, the light will continue flashing.
'08 Tacoma Page 160	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the engine switch switch off to the “OFF” position with the odometer reading shown.2. Turn the engine switch switch to the “ON” position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The odometer indicates “000000” and the light goes off. If the system fails to reset, the light will continue flashing.
'08 Tundra Pages 204 & 205	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the engine switch to the “OFF” position with the trip meter A reading shown.2. Turn the engine switch to the “ON” position while holding down the trip meter reset knob. Hold down the button for at least 5 seconds. The odometer indicates “000000” and the light goes off. If the system fails to reset, the light will continue flashing.

Reset Engine Oil Replacement Reminder Light

2008 Model Year Toyotas

Model	Reset Reminder Light Procedure
'08 Yaris Hatchback Page 243	After changing the engine oil (except Canada) The oil change system should be reset. Perform the following procedures: <ol style="list-style-type: none">1. Turn the engine switch off with the trip A reading shown. (Page 129)2. Turn the engine switch to the ON position while holding down the trip meter reset button.3. Continue to press and hold the button until the trip meter displays 000000. If the system fails to reset, the light will continue flashing.
'08 Yaris Sedan Page 230	After changing the engine oil (except Canada) The oil change system should be reset. Perform the following procedures: <ol style="list-style-type: none">1. Turn the engine switch off with the trip A reading shown. (Page 118)2. Turn the engine switch to the ON position while holding down the ODO/TRIP button.3. Continue to press and hold the button until the trip meter displays 000000. If the system fails to reset, the light will continue flashing.
'08 4Runner Page 155	Reset the system by the following procedure: <ol style="list-style-type: none">1. Turn the ignition key to the “ACC” or “LOCK” position with the odometer reading shown.2. Turn the ignition switch to the “ON” position while holding down the trip meter reset button. Hold down the knob until the light goes off. Before the light goes off, it illuminates for 3 seconds, flashes for 2 seconds, illuminates for 1 second. If the system fails to reset, the light will continue flashing.