

Reset Engine Oil Replacement Reminder Light 2009 Model Year Scion

Model	Reset Reminder Light Procedure
<p>'09 tC</p> <p>Page 106</p>	<p>The system must be reset after the engine oil replacement. Reset the system by the following procedure:</p> <ol style="list-style-type: none"> 1. Turn the engine switch to the "OFF" position with the odometer reading shown. (For details, see "Odometer and two trip meters" on page 101.) 2. Turn the engine switch to the "ON" position while holding down the trip meter reset knob. <p>Hold down the knob for at least 5 seconds. The odometer indicates "000000" and the light goes off.</p>
<p>'09 xB</p> <p>Page 101</p>	<p>The system must be reset after the engine oil replacement. Reset the system by following the procedure below:</p> <ol style="list-style-type: none"> 1. Turn the engine switch to the "OFF" position with the trip meter A reading shown. (For details, see "Odometer and two trip meters" on page 95.) 2. Turn the engine switch to the "ON" position while holding down the trip meter reset knob. <p>Hold down the knob for at least 5 seconds. The light goes off, and the display shows zero for 1 second and changes to the odometer reading.</p> <p>If the system fails to reset, the light will keep flashing.</p>
<p>'09 xD</p> <p>Pages 109 & 110</p>	<p>The system must be reset after the engine oil replacement. Reset the system by following the procedure below:</p> <ol style="list-style-type: none"> 1. Turn the engine switch to the "OFF" position with the odometer reading shown. (For details, see "Multi-information display" on page 102.) 2. Turn the engine switch to the "ON" position while holding down the trip meter reset knob. <p>Hold down the knob for at least 5 seconds. The light goes off, and the display shows zero for 1 second and changes to the odometer reading.</p> <p>If the system fails to reset, the light will remain on or keep flashing.</p>